



Remove Equipment  
 Remove and Cap  
 Restore to Operational  
 Currently Operational

The Dalles Dam  
 Diffuser Valve Location & Numbering

Additionally:  
 All Fish Elevator diffusers, E4-1, -2, -3, -4, maintain operational  
 All North Fishway diffusers 1-A, -B, -C, -D, -E, -F, -G, -H, N-1, -2, -3, -4, -5, -6, -7, -8, -9, Remove Equipment